

USER MANUAL

IN THE BOX

- Green & Red Filters
- USB-C charging cable
- Warrior X4
- Holder
- Flashlight Mount
- SROD Long Coil Wire Magnetic Remote Switch

Table 1: Specification

COOL WHITE CCT: 5700-6700K CRI:70

REGULAR MODE

HIGH	2,600 lumens	3mm	140mm	20mm
LOW	300 lumens	8m		

Table 2: USB-C charging cable

Charge Type	USB-C
Cable length	0.8m
Input	5V/2A
Time to fully charge	About 3.5 hours

MCC (Optional Accessory)

Cable length	0.5m
Input	5V/2A
Output	CC/CV 4.2V±0.05V 2.0A
Time to fully charge	About 5 hours

Table 3: Tactical Mode

MEDIUM	1,000 lumens	150mm	20mm
STROBE	1300x2600 lumens	33ms	
99.31Dcd	630m	2m	
IPX8	241g±0.77g±0.05g (Including Battery)	Working temperature 0-40°C	
0.13149	0.935mm	Rechargeable Li-ion Battery 5000mAh 3.6V (19Wh)	
0.15611	0.15611mm		

**Above data are tested per ANSI/NEMA FL-1-2009 standard in Olight's lab for reference.*

Figure 1: Remove the insulating film

Figure 2: Charge

Table 2: USB-C charging cable

Table 1: Specification

Table 3: Tactical Mode

Figure 3: Magnetic Remote Switch

Figure 4: Regular Mode

Figure 5: Turn on/off Low mode (2):

Figure 6: Turn on/off High mode (1):

Figure 7: Turn on/off High mode (2):

Figure 8: Switch to High mode:

Figure 9: Switch between Regular and Tactical modes:

Figure 10: Turn on/off Mid mode (1):

Figure 11: Turn on/off Mid mode (2):

Figure 12: Turn on/off Strobe (1):

Figure 13: Turn on/off Strobe (2):

Figure 14: Battery level indicator

Figure 15: Tactical Mode

Figure 16: Tactical Mode

Figure 17: Tactical Mode

Figure 18: Tactical Mode

Figure 19: Tactical Mode

Figure 20: Tactical Mode

Figure 21: Tactical Mode

Figure 22: Tactical Mode

Figure 23: Tactical Mode

Figure 24: Tactical Mode

Figure 25: Tactical Mode

Figure 26: Tactical Mode

Figure 27: Tactical Mode

Figure 28: Tactical Mode

Figure 29: Tactical Mode

Figure 30: Tactical Mode

Figure 31: Tactical Mode

Figure 32: Tactical Mode

Figure 33: Tactical Mode

Figure 34: Tactical Mode

Figure 35: Tactical Mode

Figure 36: Tactical Mode

Figure 37: Tactical Mode

Figure 38: Tactical Mode

Figure 39: Tactical Mode

Figure 40: Tactical Mode

Figure 41: Tactical Mode

Figure 42: Tactical Mode

Figure 43: Tactical Mode

Figure 44: Tactical Mode

Figure 45: Tactical Mode

Figure 46: Tactical Mode

Figure 47: Tactical Mode

Figure 48: Tactical Mode

Figure 49: Tactical Mode

Figure 50: Tactical Mode

Figure 51: Tactical Mode

Figure 52: Tactical Mode

Figure 53: Tactical Mode

Figure 54: Tactical Mode

CONTENTS

- (EN) English 01
- (CN) 简体中文 01
- (FI) Finnish 01
- (NO) Norwegian 03
- (SV) Swedish 04
- (NL) Nederlands 05
- (PL) Polska 06
- (DE) Deutsch 07
- (HU) Magyarországi 08
- (RU) Русский 09
- (ES) Español 10
- (RO) Românesc 11
- (UA) Ukrainian 12
- (JP) 日本語 13
- (KR) 한국어 15
- (TH) ไทย 16
- (FR) Français 17
- (IT) Italiano 18
- (SK) Slovenskýjazyk 19
- (PT) Português 20

Table 1: Specification

COOL WHITE CCT: 5700-6700K CRI:70

REGULAR MODE

HIGH	2,600 lumens	3mm	140mm	20mm
LOW	300 lumens	8m		

Table 2: USB-C charging cable

Table 3: Tactical Mode

Figure 1: Remove the insulating film

Figure 2: Charge

Figure 3: Magnetic Remote Switch

Figure 4: Regular Mode

Figure 5: Turn on/off Low mode (2):

Figure 6: Turn on/off High mode (1):

Figure 7: Turn on/off High mode (2):

Figure 8: Switch to High mode:

Figure 9: Switch between Regular and Tactical modes:

Figure 10: Turn on/off Mid mode (1):

Figure 11: Turn on/off Mid mode (2):

Figure 12: Turn on/off Strobe (1):

Figure 13: Turn on/off Strobe (2):

Figure 14: Battery level indicator

Figure 15: Tactical Mode

Figure 16: Tactical Mode

Figure 17: Tactical Mode

Figure 18: Tactical Mode

Figure 19: Tactical Mode

Figure 20: Tactical Mode

Figure 21: Tactical Mode

Figure 22: Tactical Mode

Figure 23: Tactical Mode

Figure 24: Tactical Mode

Figure 25: Tactical Mode

Figure 26: Tactical Mode

Figure 27: Tactical Mode

Figure 28: Tactical Mode

Figure 29: Tactical Mode

Figure 30: Tactical Mode

Figure 31: Tactical Mode

Figure 32: Tactical Mode

Figure 33: Tactical Mode

Figure 34: Tactical Mode

Figure 35: Tactical Mode

Figure 36: Tactical Mode

Figure 37: Tactical Mode

Figure 38: Tactical Mode

Figure 39: Tactical Mode

Figure 40: Tactical Mode

Figure 41: Tactical Mode

Figure 42: Tactical Mode

Figure 43: Tactical Mode

Figure 44: Tactical Mode

Figure 45: Tactical Mode

Figure 46: Tactical Mode

Figure 47: Tactical Mode

Figure 48: Tactical Mode

Figure 49: Tactical Mode

Figure 50: Tactical Mode

Figure 51: Tactical Mode

Figure 52: Tactical Mode

Figure 53: Tactical Mode

Figure 54: Tactical Mode

WARRANTY

Initial 30 days of purchase: Contact the original seller for repair or replacement.

Within 5 years of purchase: Contact Olight for repair or replacement.

Battery Warranty: Olight offers a one year warranty for all rechargeable batteries.

USA Customer Support: cso@lightstore.com

Global Customer Support: contact@lightworld.com

Visit www.oightworld.com to see our complete product line of portable illumination tools.

34000 0636 A 7.17.2023

Table 3: Multi-language dictionary

EN	Low	Medium	High	Strobe	Tap	Tap and hold	Press	Press and hold	Unscrew
CN	低档	中档	高档	爆闪	轻按	轻按保持	单击	长按	拧开
FI	Low-tila	Medium-tila	High-tila	Strobo	Napsauta	Napsauta ja pidä painettuna	Napsauta	Paina ja pidä painettuna	Ruuvaa irti
NO	Lav modus	Medium modus	Høy modus	Strobomodus	Trykke på	Trykk og hold	Trykk	Hold inne	Skriv av
SV	Lågäge	Mellanäge	Hög äge	Bländ äge	Trycka på	Tryck och håll	Tryck	Tryck och håll	Skriv loss
NL	Lage Modus	Gemiddelde Modus	Hoge Modus	Stroboscoop	Tik	Tik en houd vast	Druk	Houd ingedrukt	Schoof los.
PL	Tryb niski	Tryb sredni	Tryb wysoki	Strobe	Doknij	Doknij i przytrzymaj	Naciśnij	Naciśnij i przytrzymaj	Odkręć
DE	Niedriger Modus	Mittlerer Modus	Hoher Modus	Strobe	Halb drücken	Halb gedrückt halten	Drücken	Gedrückt halten	Drehen
HU	Alacsony mód	Közepes mód	Magas mód	Stroboszkóp	Érintés	Érintés és tartás	Megnyomás	Nyomva tartás	Csavarási ki
RU	Минимальный режим	Средний режим	Максимальный режим	Режим стробоскоп	Нажмите	Нажмите и удерживайте	Нажмите	Нажмите и удерживайте	отвинтить
ES	Modo de potencia baja	Modo de potencia media	Modo de potencia alta	Estroboscópico	Pulse	Pulse y mantenga	Presione	Mantenga presionado	Desenroscar
RO	Mod mic	Mod mediu	Mod mare	Stroboscop	Atingeți	Atingeți și țineți apăsat	Apăsare	Apăsări și mențineți apăsat	Desurubati
UA	Режим Low	Режим Medium	Режим High	Режим стробоскопа	Нахитити	Нахитити і утримувати	Прес	Нахитити і утримувати	Відкрутити
FR	Mode Bas	Mode Moyen	Mode Haut	Stroboscope	Appuyer	Appuyer légèrement et maintenir	Appuyer	Appuyer fermement et maintenir	Dévisser
JP	ローモード	ミディアムモード	ハイモード	ストロボモード	タップ	押したまま	プレス	押したまま	ネジを緩める
KR	로우 모드	미디엄 모드	하이 모드	스트로브 모드	탭하기	탭하고 유지하기	누르기	누르고 유지하기	나사 풀기
TH	โหมดพลังงานต่ำ	โหมดพลังงานกลาง	โหมดพลังงานสูง	โหมดแฟลช	แตะ	แตะและกด	กด	กดและกด	คลายน็อต
TH	โหมดพลังงานต่ำ	โหมดพลังงานกลาง	โหมดพลังงานสูง	โหมดแฟลช	แตะ	แตะและกด	กด	กดและกด	คลายน็อต
FR	Mode Bas	Mode Moyen	Mode Haut	Stroboscope	Appuyer	Appuyer légèrement et maintenir	Appuyer	Appuyer fermement et maintenir	Dévisser
IT	Modalità bassa	Modalità media	Modalità alta	Strobo	Premi	Premi e tieni premuto	Premere	Premere e tenere premuto	Svitare
SK	slabý režim	střední režim	vysoký režim	stroboskop	Klepněte	Klekněte a podržte	Stlačením	Stlačením a podržte	Odstavte
PT	Modo baixo	Modo Médio	Modo alto	Strobo	Toçar	Toçar e manter	Pressionar	Mantêr pressionado	Desenroscar