 


# OLIGHT

 
## USER MANUAL

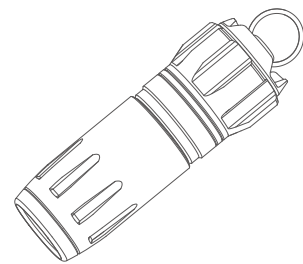


# i18

Thank you for purchasing this Olight product. Please read this manual carefully before use and keep it for future reference!

### IN THE BOX

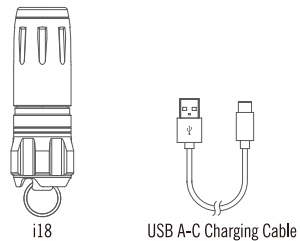

### SPECIFICATIONS

 


CANDELA	THROW	WATERPROOF	IMPACT
580cd	48m	IPX8	1.5m

(L)51.3x (D)18.6mm 51g / 1.8oz  
(L)2.02x (D)0.73in


\* The output brightness will decrease as the battery power decreases. The running time is the time when the brightness attenuates to 50% of the initial value after the battery is fully charged.

### PRODUCT OVERVIEW

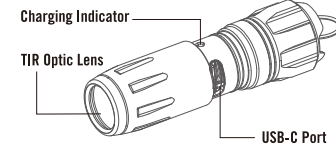 

### CHARGING

 Before first use, please fully charge the battery. Unscrew the flashlight tail from the head till the charging port is revealed. Connect the flashlight to an external USB power source via the provided USB A-C charging cable. The red indicator means charging, while the green indicator means charging completed.

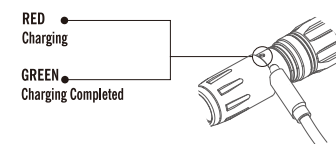

⌚ Max time to reach a full charge: 100min



### DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT throw the flashlight into the fire. This may cause the battery to explode or incur unexpected hazards.

### WARNING

- DO NOT try to pull apart the flashlight. This may cause malfunction or make it unusable.
- DO NOT clean the lens with alcohol or any other chemicals.

### EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual.

### CONTENTS

( EN ) English	01
( CN ) 简体中文	01
( FI ) Finnish	01
( NO ) Norwegian	01
( SV ) Swedish	02
( NL ) Nederlands	02
( PL ) Polska	02
( DE ) Deutsch	02
( HU ) Magyarország	03
( RU ) Русский	03
( ES ) Español	03
( RO ) Romanesc	03
( UA ) Ukrainian	04
( JP ) 日本語	04
( KR ) 한국어	04
( TH ) ไทย	05
( FR ) Français	05
( IT ) Italiano	05
( SK ) Slovenskýjazyk	05
( PT ) Português	06

### ( EN ) English

#### HOW TO OPERATE

Slightly tighten the tailcap clockwise to turn on the light and access low mode. Fully tighten the tailcap to access high mode. Twist the tailcap counterclockwise to turn off the light.

### ( CN ) 简体中文

#### 操作说明

顺时针轻旋尾盖以开启手电并进入低档模式。进一步拧紧尾盖以进入高档模式。逆时针旋转尾盖以关闭手电。

### ( FI ) Finnish

#### KÄYTTÖOHJE

Kytke taskulampun low mode päälle kiertämällä peräkorkkia myötäpäivään niin kauan, kunnes valo syttyy. Kytke taskulampun high mode päälle kiertämällä peräkorkkia myötäpäivään niin kauan, kunnes valo kirkastuu. Sammuta valo kiertämällä peräkorkkia vastapäivään.

### ( NO ) Norwegian

#### HVORDAN BRUKE

Løsn litt på bunestykket med klokken for å skru på lykten og starte low-modus. Skru til bunestykket helt for å aktivere high-modus. Skru bunestykket mot klokken for å skru av lykten.

01

### ( SV ) Swedish

#### HUR DEN FUNGERAR

PÅ / AV: Vrid ficklampans kroppsdel medurs för att sätta på ficklampan på lågt effektläge. Dra åt ficklampan kroppsdel helt för att aktivera högt effektläge. Vrid lampans kroppsdel moturs för att stänga av lampan.

### ( NL ) Nederlands

#### HOE TE BEDIENEN

Draai de achterkant van de zaklamp lichtjes met de klok mee vast totdat het aangaat in de laagste stand. Draai de achterkant volledig vast om de hoogste stand te activeren. Draai tegen de klok in om het licht weer uit te zetten.

### ( PL ) Polska

#### INSTRUKCJA OBSŁUGI

Delikatnie przekręć tylną część latarki zgodnie z kierunkiem wskazówek zegara aby włączyć ją w trybie niskim. Całkowicie dokręcenie tylnej części latarki uruchomi tryb wysoki. Odkręcenie tylnej części latarki w kierunku przeciwnym do wskazówek zegara wyłączy latarkę.

### ( DE ) Deutsch

#### BEDIENUNGSANLEITUNG

Die Endkappe im Uhrzeigersinn stückweise drehen bis die Lampe im niedrigen Modus leuchtet. Bis zum Anschlag drehen, um den hohen Modus zu erreichen. Zum Ausschalten gegen den Uhrzeigersinn drehen.

02

### ( HU ) Magyarország

#### A HASZNÁLAT MÓDJA

Húzza meg enyhén az óramutató járásával megegyező irányba forgatással a hátsó zárókupakot a lámpa alacsony fényerőfokozaton történő bekapcsolásához. Húzza meg teljesen a hátsó zárókupakot a lámpa erős fényerőfokozatra kapcsolásához. A lámpa kikapcsolásához csavarja a zárókupakot az óramutató járásával ellentétes irányba.

### ( RU ) Русский

#### ИНСТРУКЦИЯ

Слегка закрутите торцевую крышку по часовой стрелке, чтобы включить фонарь в минимальном режиме. Полностью закрутите торцевую крышку, чтобы включить фонарь в максимальном режиме. Чтобы выключить фонарь, открутите крышку.

### ( ES ) Español

#### CÓMO UTILIZAR

Apriete ligeramente la tapa trasera en el sentido de las agujas del reloj para encender la luz en modo bajo. Apriete completamente la tapa trasera para acceder al modo alto. Gire la tapa trasera en sentido contrario a las agujas del reloj para apagar la luz.

### ( RO ) Românesc

03

### MOD DE OPERARE

Strange capul lanternei ușor pentru a porni pe modul mic. Strange capul lanternei total pentru a accesa modul mare. Desurubeaza capul lanternei pana ce lanterna se opreste.

### ( UA ) Ukrainian

#### ВИКОРИСТАННЯ

Злегка затягніть задню кришку за годинниковою стрілкою, щоб увімкнути низький режим. Повністю затягніть задню кришку, щоб отримати увімкнуті високий режим. Обертайте задню кришку проти годинникової стрілки щоб вимкнути світло.

### ( JP ) 日本語

#### 操作方法

時計回りに軽くテールキャップを回してlowモードに入ります。きつくテールキャップを締め込むとhighモードに入ります。反時計回りにテールキャップを回して消灯します。

### ( KR ) 한국어

#### 작동방법

시계 방향으로 테일캡을 조금씩 돌리면 로우 모드로 라이트가 켜지며 끝까지 돌리면 하이 모드가 됩니다. 반시계 방향으로 돌리면 꺼집니다.

04

### ( TH ) ไทย

#### วิธีการใช้งาน

ขะแตะไฟฉายอยู่ในสถานะปิด  
ให้หมุนฝาท้ายไฟฉายตามเข็มนาฬิกาไปอย่างช้า ๆ  
ไฟฉายจะติดสว่างในระดับแสงต่ำ และหมุนฝาท้ายต่อไป  
ไฟฉายจะเปลี่ยนเป็นระดับแสงสูง คลายฝาท้ายไฟฉาย  
เพื่อปิด

### ( FR ) Français

#### COMMENT OPÉRER

Tournez légèrement le capuchon de talon dans le sens horaire pour allumer en mode de la lumière légère. Tournez complètement le capuchon de talon pour allumer en mode de la lumière forte. Tournez le capuchon de talon dans le sens antihoraire pour éteindre la lumière.

### ( IT ) Italiano

#### MODALITÀ DI UTILIZZO

Stringere leggermente in senso orario il tappo della torcia per attivare la modalità a luce bassa. Stringere in maniera completa per attivare la modalità alta. Ruotare in senso antiorario per spegnere la luce.

### ( SK ) Slovenskýjazyk

#### AKO POUŽÍVAŤ

05

Mierne dotiahnite zadný kryt v smere hodinových ručičiek, aby ste zapli svetlido do režim nízkej úrovne jas. Úplne dotiahnite zadný kryt, aby ste sa dostali do režimu vysokej úrovne jas. Otočte zadný kryt proti smeru hodinových ručičiek na vypnutie svetlida.

### ( PT ) Português

#### COMO OPERAR

Gire levemente a tampa traseira no sentido horário para ligar a luz no modo luz baixo. Gire totalmente a tampa traseira para acessar o modo luz alta. Gire a tampa traseira no sentido anti-horário para desligar a luz.

#### FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate

06

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### WEEE Disposal and Recycling Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, to protect human health and the environment, you should dispose of your waste equipment at a designated collection point for the recycling of WEEE, appointed by the government or local authorities. Proper disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

### ISED Notice

This device complies with Industry Canada's ICES standard(s). Operation is subject to the following two conditions:  
(1) this device may not cause interference, and  
(2) this device must accept any interference, including interference that may cause undesired operation of the device.  
Cet appareil est conforme aux normes ICES d'industrie Canada.L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-005.  
Cet appareil numérique de la classe B est conforme à la norme NMB-005 du Canada.



- Do not ingest the battery, as there is a Chemical Burn Hazard.
- This product contains a coin/button cell battery.
- If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.

- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not replace the battery with an incorrect type that can defeat a safeguard, such as certain types of lithium batteries.
- Do not dispose of the battery in fire, a hot oven, or by crushing or cutting it, as it may result in an explosion.
- Avoid leaving the battery in extremely high-temperature environments, as it may cause an explosion or the leakage of flammable liquid or gas.
- A battery exposed to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

#### EU Declaration of Conformity

Hereby Dongguan Olight E-Commerce Technology Co.,Ltd declares that the equipment(i18) is in compliance with Directive 2014/30/EU and RoHS Directive 2011/65/EU & (EU) 2015/863. The equipment [Wireless Charger] is in compliance with Directive 2014/53/EU and RoHS Directive 2011/65/EU & (EU) 2015/863.

The full text of the EU declarabon of conformity is available at the following internet address:  
<https://www.olight.com/download>

*The light source of this luminaire is not replaceable:* when the light source reaches its end of life the whole luminaire shall be replaced.

#### Replacement of a battery with an incorrect type that can defeat a safeguard.



Caution: Do not stare at operating light source



FR  
Les ampoules et batterie et accessoire se recyclent



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)



FR  
ETUI + BARQUETTE



### WARRANTY

We are proud to offer a lifetime warranty in Australia, China, France, Germany, and the USA. We are also working hard to expand coverage to more countries, where we provide a 2 or 5-year warranty. The warranty covers defects in material and workmanship under normal use, excluding loss, theft, deliberate damage, or cosmetic damage. For complete warranty information, please visit [Olight.com](http://Olight.com) or your local Olight official website.

Australia Customer Support [contact@olight-store.com.au](mailto:contact@olight-store.com.au)  
Austria Customer Support [kontakt@olightstore.at](mailto:kontakt@olightstore.at)  
Canada Customer Support [cs@olightstore.ca](mailto:cs@olightstore.ca)  
China Customer Support Wechat: olightcs  
France Customer Support [cs@olightstore.fr](mailto:cs@olightstore.fr)  
Germany Customer Support [kontakt@olightstore.de](mailto:kontakt@olightstore.de)  
Italy Customer Support [contatto@olightstore.it](mailto:contatto@olightstore.it)

Japan Customer Support [cs@olightstore.jp](mailto:cs@olightstore.jp)  
Korea Customer Support [olightkorea@olight.com](mailto:olightkorea@olight.com)  
Spain Customer Support [contacto@olightstore.es](mailto:contacto@olightstore.es)  
Thailand Customer Support [cs@olightstore.co.th](mailto:cs@olightstore.co.th)  
UK Customer Support [contact@olightstore.uk](mailto:contact@olightstore.uk)  
USA Customer Support [cs@olightstore.com](mailto:cs@olightstore.com)  
For other countries and regions, please contact Global Customer Support [contact@olight.com](mailto:contact@olight.com)



Dongguan Olight E-Commerce Technology Co., Ltd.

4th Floor, Building 4, Kegu Industrial Park, No. 6 Zhongnan Road, Chang'an Town, Dongguan City, Guangdong, China.

Made in China



3.4000.1120

A. 02. 18. 2025